

Attention:

This is an install at your own risk item. If you are not capable of installing it successfully then we suggest you take this item to a professional shop.

1. Remove left side cover
2. Remove battery
3. Remove 3- 10 mm battery box bolts (Fig. 1)
4. Remove solenoid attaching nuts (Fig.2)

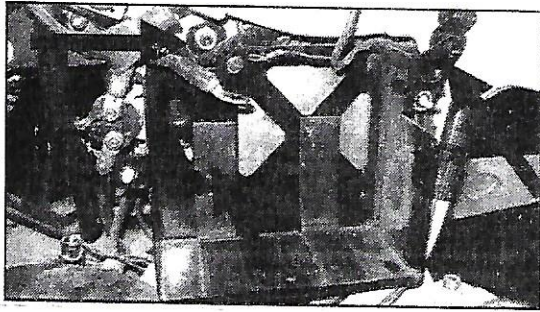


Fig. 1- Remove the 3 bolts


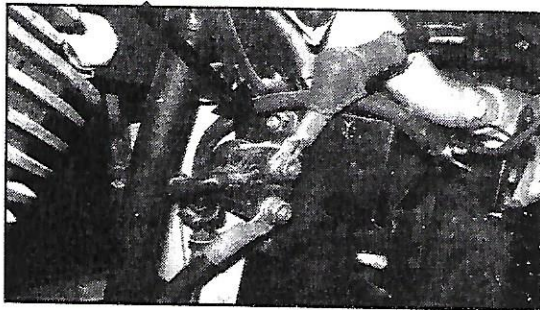


Fig. 2- Remove the 2 attaching nuts

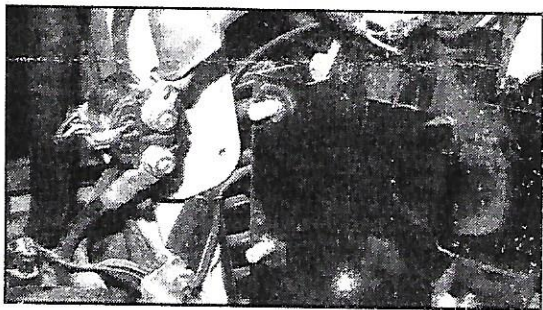

It should look like this when done

5. Slide the key bracket over the studs and then put the solenoid back on. Put nuts on and tighten. (Fig. 3)

6. Install the ignition switch into the bracket. Make sure to use our extension harness part # KBX-051 to make the wiring easy. Connect harness . (Fig.4) Make sure to tuck wires back up nicely.

7. Install battery box bolts and tighten.

8. Install battery and cables. (Now is a good time to test your battery, replace if needed.)

9. Test ignition to make sure everything works properly.

10. Put side panel back in place. Make sure it snaps on or you will loose it!

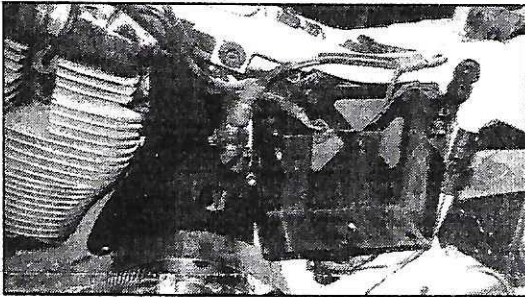


Fig. 3— slide the key bracket over the studs

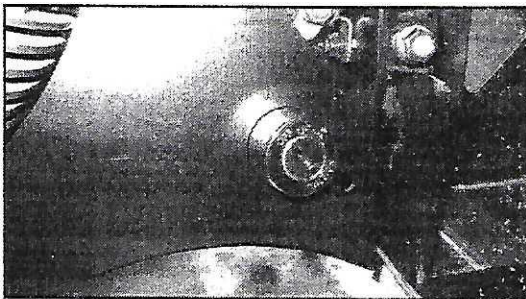


Fig. 4— Install ignition switch