

Wedge cover installation instructions

Item 499, 522, & 585


Step # 1: Right Side cover removal (Non Ignition Side).
Pull Away Stock Cover From Bike

Step # 2: Install Hardware Mounts.
Insert Qty. 3 of the provided white clips by pressing them firmly into the slots (See picture # 2).

Step # 3: Attaching Base.
Using the provided 1.5 inch Phillips flat head screws and spacers attach the base to the bike. Leave the screws loose until they are all in. Be sure not to over tighten screws.

Step # 4: Installing Artwork.
Align backer plate with artwork making sure all bolt holes line up. Using provided M4x18 Button head cap screws attach artwork and backer to the base, be sure not to over tighten the screws, a nice snug fit is all you need.

Step # 5: Clean and Enjoy.
Right side installation is now complete. To ensure a beautiful well protected finish on your parts clean them using a micro fiber cloth and add a few coats of a carnauba wax every three months.

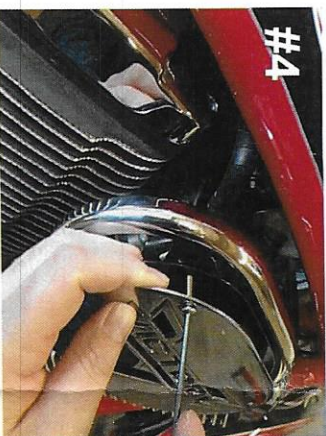

Required Tools:
Phillips Head Screw Driver &
2.5mm Hex Key (Allen Wrench)
Time Needed:
5-10 Minutes



Step # 1: Left side cover removal (Ignition side).
Pull away side cover from bike. Be sure to remove key from ignition and put in a safe place.

Step # 2: Install hardware mounts.
Insert Qty. 3 of the provided white clips by pressing them firmly into the slots (See picture # 2).

Step # 3: Attaching Base.
Using the provided 1.5 inch Phillips flat head screws and spacers attach the base to the bike. Leave the screws loose until they are all in. Be sure not to over tighten screws.

*Note: On step # 3 you may be required to stack a few washers behind the base plate to keep artwork from hitting the ignition cylinder.

Step # 4: Installing Artwork.
Align backer plate with artwork making sure all bolt holes line up. Using provided M4x18 Button head cap screws attach artwork and backer to the base, be sure not to over tighten the screws, a nice snug fit is all you need.

Step # 5: Clean & Enjoy.
Right side installation is now complete. To ensure a beautiful well protected finish on your parts clean them using a micro fiber cloth and add a few coats of a carnauba wax every three months.



#1




#2



#3



#4

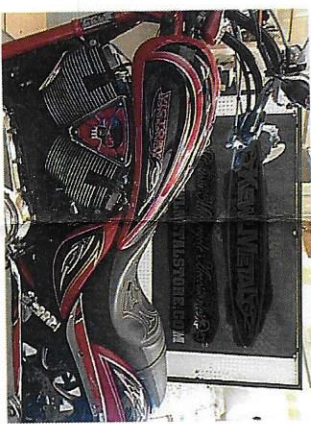

#5